# Time Relay USER GUIDE's



ORDEL

TC990

# **DEVICE DESCRIPTION**

Model TC440 devices are designed for applications which requires different timing processes. TC440 may be operated in four different modes by the usage of two timer and time unit can be chosen as seconds, minutes or hours in the interval of 0.00-99.99 and 0-9999.

100-240Vac/dc universal and 24Vac/dc power voltage models are available.

TC990 is compatible with the standards of EMC and international security standards.

# **SAFETY PRECAUTIONS**

- Before using the device, please read the warnings below and this guide carefully.
  - The accidents and damages resulting from not following the warnings included in this guide are under user's responsibility.
  - Take the necessary precautions in order to prevent accidents and damages that may result in case the device gets faulty.
  - Do not use this device in environments where flammable or explosive gases exist.
  - Do not allow metal fragments or lead wire scraps or liquid matters to fall inside this device.
  - Do no touch the terminals while the device is energized (power on)
  - Device will be out of guarantee when it gets faulty resulted from misusages.
  - Do not power up the device before the connections related with the device are performed in accordance with connection diagram.
  - Device should be used in the limits of that is mentioned in this guide.
  - Sensor and signalling cables should not be routed close to the power


cables with high current and voltage.

 Device settings should be set properly according to environment and usage conditions.


# **INDICATOR CHARACTERS**


|   | SYMBOLISATION OF ALPHABETICAL CHARACTERS |   |   |   |   |   |   |   |          |    |   |   |
|---|--|---|---|---|---|---|---|---|----------|----|---|---|
| А | В  | С | D | Е | F | G | Н | I | J        | K  | L | М |
| R | Ь  | L | d | E | F | L | Н | ī | ц        | ٢  | L | ñ |
| N | 0  | Р | Q | R | S | Т | U | ٧ | W        | Х  | Υ | Z |
| П | ۵  | P | 9 | _ | 5 | Ł | Ш | u | <u>י</u> | سم | 님 | Ē |

# **PRODUCT CODE**

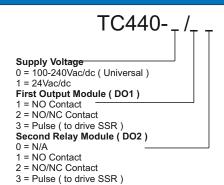

# **CONNECTION DIAGRAM**

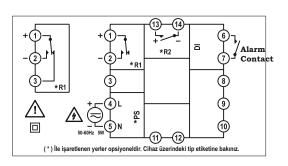


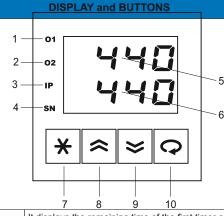

| 1  | UPPER<br>DISPLAY  | It displays the remaining time of the first timer or the paramater names.  |  |  |  |
|----|-------------------|--|--|--|--|
| 2  | LOWER<br>DISPLAY  | It displays the remaining time of the second timer or the paramater names. |  |  |  |
| 3  | O1 LED            | It indicates the state of first output module (DO1).                       |  |  |  |
| 4  | O2 LED            | It indicates the state of second output module (DO2).                      |  |  |  |
| 5  | IP LED            | It indicates the state of alarm contact (DI).                              |  |  |  |
| 6  | SN LED            | It blinks with a periode of 1 second while the time passes.                |  |  |  |
| 7  | ASTERIX<br>BUTTON | It is used to return to Operator-Screen.                                   |  |  |  |
| 8  | UPPER<br>ARROW    | It is used to increase the time that will be set or the parameter value.   |  |  |  |
| 9  | LOWER<br>ARROW    | It is used to decrease the time that will be set or the parameter value.   |  |  |  |
| 10 | ENTER<br>BUTTON   | It is used to access the next parameter.                                   |  |  |  |

#### **TECHNICAL SPECIFICATIONS** Supply Voltage 100-240Vac/dc: +%10 -%15 24Vac/dc: +%10 -%20 5W,8VA Power Output Modules ( NO Contact: 250Vac NC Contact: 250Vac Contact Lifetime Without Load: 10.000.000 sw, With 250Vac 3A res. load: 100 year, 100.000 renewals Memory Accuracy +/- %0.01 Environment Operation: -10...+55C, Storage: -20...+65C Protection IP20 Dimensions Width: 48 mm, Height: 48 mm, Depth: 108 mm Panel Cut-Out 45 +/-0,5 mm x45 +/-0,5 mm Weight 154 gr

## **USAGE**

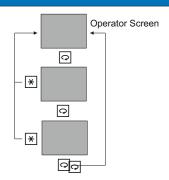

While in normal operation state, upper display displays the remaining time, lower display displays the remaining time of second timer. This view is called Operator-Screen.

While in Operator-Screen, pressing the "D" key brings the set value of first timer (SET.1). pressing the "
"key for the second time brings the set value of second timer (SET.2).

Any set value can be changed by pressing "\oxedex" or "\oxedex" keys.

In order to return the Operator-Screen while in any time, "★" key can be used.

Operation mode of the device, time unit and decimal point are set using the parameters that can be found in Configuration-Page.

Accessing configuration page and the parameters in this page are described in the next section.

# **ACCSESS to CONFIGURATION PAGE**

In order to access the configuration page, just after energizing the device, in the interval of two seconds (while 8.8.8.8. Is displayed on screen), "★" and "□" keys should be pressed simultaneously and held while opening message appears on screen.

In configuration page, first display displays the parameter name and the second displays the parameter value. "\(\begin{align\*}
\text{and "\(\begin{align\*}
\text{and "\(\begin{align\*}
\text{align\*}
\text{align\*}
\text{and "\(\begin{align\*}
\text{align\*}
\text{align\*}
\text{and "\(\begin{align\*}
\text{align\*}
\text{align\*}
\text{align\*}
\text{align\*}
\text{align\*}
\text{align\*} "☑" parameter is used to access the next parameter and "Ĭ" key is used to exit from Configuration-Page.

# **CONFIGURATION PAGE PARAMETERS** nd Operating Mode of First Timer ( Ref Table-1 )

Setting Preferences: 0 - 5 Time Unit of First Timer Setting Preferences: SEC = Second MIN = Minute HR =

Par. 03 Decimal Point of First Timer Setting Preferences: □ - 2

Par. 04-Operating Mode of Second Timer ( Ref Table-1 ) Setting Preferences: 0 - 5

Par. 05 Time Unit of Second Timer Setting Preferences: SEC = Second MIN = Minute HR = Par. 06-**Decimal Point of Second Timer** Setting Preferences: 0 -

# **OPERATION MODES**

MODE 0: When the alarm contact is ON, the time count and the selected relay are ON. At the end of the time, the relay turns OFF.

MODE 1: When the warning contact is ON, the relay is ON at the end of the timer and time. The relay output is interrupted when the alarm contact is interrupted.

MODE 2: Starts counting time when a warning contact is set and stopped. The relay is energized until the warning contact is ON and the time is expired.

MODE 3: If this timer is selected, the timer starts counting from the moment the other timer's timer expires. During this time the relay will be ON. At the end of the time the relay output is OFF. If the two timers' mode is set to 3, the two timers will run continuously as opposed to turning off the unit's energy.

MODE 4: When the up arrow key is pressed, the timer starts counting and at the end the relay turns ON. The relay is OFF when the down arrow key is pressed. If the up arrow key is pressed while counting time, counting is canceled and relay turns OFF.

MOD 5: Starts counting time when the up arrow key is pressed. The relay turns ON when counting time. At the end of time the relay turns OFF. If the down arrow key is pressed while counting time, counting is canceled and relay turns OFF.

## TABLE1

| Table-1         | MOD0 (MD.n = 0)        | MOD1 (MD.n = 1)   | MOD2 (MD.n = 2)          | MOD3 (MD.n = 3)  |
|-----------------|------------------------|-------------------|--------------------------|------------------|
| WARNING<br>(DI) | 1<br>0<br>t=T •••• t=0 | 1<br>0<br>t=T t=0 | 1<br>0<br>0 t=T ···· t=0 | 1 0 0 td=0       |
| OUTPUT<br>(DOn) | 1<br>0<br>t=T •••• t=0 | 1 0 t=T ···· t=0  | 1<br>0<br>0 t=T ···· t=0 | 1 0 t=T ···· t=0 |

"T" represents the set time and "t" represents the remaining time. Hached line is the active time line.

Operating modes in table are valid for both timers. "n" represents the timer number. In MOD3, (MD.n = 3) "td=0" is the time that other timer becomes "0". Namely, if a timer is wanted to run after other timer, MOD3 should be selected. If both timers is wanted to be run in order, MOD3 should be selected for both timers.

ORDEL Ltd. Şti. Uzayçağı Cad. 1252. Sok. No:12 OSTİM/ANKARA Tel:+90 312 385 70 96 (PBX) Fax: +90 312 385 70 78 Technical Servis:



