OC770 Oven Controller USER'S GUIDE







- Before using the device, please read the warnings below and this guide carefully. The
 accidents or damages resulting from not following the warnings included in this guide
 are under user's responsibility.
- This device is intended to be used by qualified personnel in industrial environments, do not use in houselike environments.
- Do not use the device at places where corrosive, flammable and explosive gases exist.
 Contact points may create electrical discharge and this may cause explosion or fire.
- Do not allow metal fragments or lead wire scraps or liquid matters to fall inside this device. Otherwise fire or electrical shck may happen.
- Take the neceessary precautions in order to prevent accidents and damages that may result in case the device gets faulty.
- There is no fuse or switch that brings the device in power down state, these should be added to the system by the user.
- Sensor and signalling cables should not be routed close to the power cables or inductive load cables.
- Do not power up the device before the connections related with the device are performed in accordance with connection diagram.
- Do not power up the device before the connections related with the device are performed in accordance with the connection diagram. While the device is powered, do


OC770 Model devices are designed for the applications which requires synchronous temperature control and timing. They are reliable, hi tech devices in dimension of 96x96mm and adapted to international standards.


They offer advanced (PID/ON/OFF) control, hi accuracy and stability, alternative hardware, all-purpose programming and easy use features.

They can be used with all kinds of power supply by the feature of Universal Power Supply.


They can connect MODBUS connection network via RS485 Communication Module. They can be controlled in network, send and receive data.

To Pass Operator Page

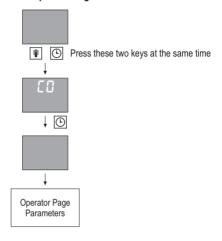

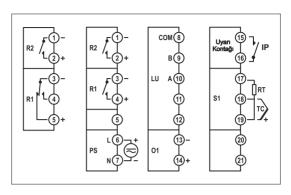



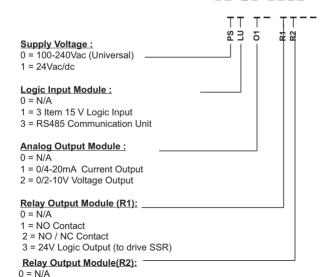


1 = NO Contact


2 = 24V Logic Output (to drive SSR)


TC Inputs
(B,E,J,K,L,N,R,S,T,U)

(15)
(16)
(18)
TC


Alarm Contact

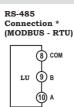


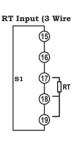


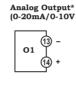


Relays/SSR Outputs*

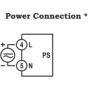

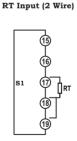

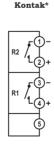


NO

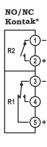

^{*} This optional modules. Look device sticker.

Supply Voltage	100-240Vac/dc: +%10 -%15			+%10 -%20
Power Consumption	5W,8VA			
Analog Input (AI1)	Thermocouple (B,E,J,I	K,L,N,R,S,T,	U), Res. T	hermometer (Pt100)
Analog Input	Thermocouple: $10M\Omega$			
Analog Output (AO1)	Current: 0/4-20mA, 20-	4/0mA (RL	Vol.: 0/2-10	$0V$, $10-2/0V$ (RL $\geq 1M\Omega$)
Digital Outputs (NO Contact: 250Vac	NC Contac	t: 250Vac	Pulse: 24Vdc 20mA
Contact Lifetime	Loadless: 10.000.000 t	imes With 2	50V 3A res.	load: 100.000 times
Memory	100 year, 100.000 rene	100 year, 100.000 renewals		
Accuracy	+/- %0,2			
Sampling Period	100ms			
Environment	Operation: -10+55C,	Storage: -20)+65C	
Protection	IP20			
Dimensions	Width: 96mm, Height: 96mm, Depth: 110mm			
Panel Cut-Out	92+/-0,5 mm x 92+/-0,5 mm			
Weight	430gr			

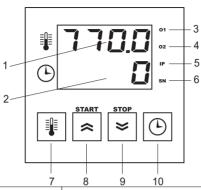

1	TEMPERATURE DISPLAY	It displays the oven temperature and error messages.
2	TIME DISPLAY	While timing operation continues, it displays the remaining time and after the time fininshes, it displays "0".
3	O1 LED	It indicates the state of first output (DO1).
4	O2 LED	It indicates the state of second output (DO2).
5	IP LED	It indicates the state of alarm contact (DI).
6	SN LED	It blinks with a periode of 1 second while the time passes.
7	TEMPERATURE SETTING BUTTON	It is used to enter the Temperature-Setting Mode.
8	UPWARDS ARROW BUTTON	It is used to start the timing operation (START) and to increase the setting values.
9	DOWNWARDS ARROW BUTTON	It is used to stop the timing operation (STOP) and to decrease the setting values.
10	TIME SETTING BUTTON	It is used to enter the Time-Setting Mode.

USAGE 9

Setting Temperature Value:

Key is pressed. When "----" is viewed on time indicator, value on temperature indicator is set using $\stackrel{\triangleright}{\Longrightarrow}$ and $\stackrel{\triangleright}{\Longrightarrow}$ keys.

Setting Time Value:

Key is pressed Just after "----" is displayed on temperature display, by using the and keys, value in time display can be set to neccesary value.

Starting the Timing Operation:

In order to start timing operation, it is enough to press (START) key or set the state of the Alarm-Contact to close position. When timing operation starts, "SN" led blink for a period of 1sec. If temperature display has an Error-Message (Ref:Page-11), timing operation cannot be started.


Terminating the Timing Operation:

In order to terminate the timing operation, it is enough to press the $\stackrel{>}{>}$ (STOP) key or set the state of Alarm-Contact to Open.

Other Settings:

For other settings, and keys are pressed simultaneously and Operator-Page parameters are accessed. Explanation of these parameters can be found in the next section.

To pass configuration page

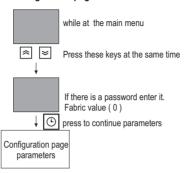

Ekran

Acıklama

Par.01---- [.2

In order to restore the settings to the factory default, this parameter should be set to "an" and "a" key should be pressed for two seconds.

Setting Preferences: 1999 - 9999

Par.02--- F5

It is used to pass to turn fabric parameters. Firstly do on this parameter.

Than Press and keys at the same time. Device is became reset and turn off and on.All the parameters are on fabric values.

Par.03---- dP

It determines the decimal level After change control set and histerezzis parameters.

Setting Range: 🛭 - 1

Par.04---- 5 1.E E[- J "\$1" determines the sensor type which is connected to the universal sensor input. This sensor is used to measure the process value.

Setting Preferences: Table 1

Table-1

A14 T	Canaar Tuna	Ctondont	Temperature Range		
AI1.T	Sensor Type	Standart	(°C)	(°F)	
TC-B	Type B Termocouple	IEC584-1	60, 1820	140, 3308	
TC-E	Type E Termocouple	IEC584-1	-200, 840	-328, 1544	
TC-J	Type J Termocouple	IEC584-1	-200, 1120	-328, 1562	
TC-K	Type K Termocouple	IEC584-1	-200, 1360	-328, 2480	
TC-L	Type L Termocouple	DIN43710	-200, 900	-328, 1652	
TC-N	Type N Termocouple	IEC584-1	-200, 1300	-328, 2372	
TC-R	Type R Termocouple	IEC584-1	-40, 1760	104, 3200	
TC-S	Type S Termocouple	IEC584-1	-40, 1760	104, 3200	
TC-T	Type T Termocouple	IEC584-1	-200, 400	-328, 752	
TC-U	Type U Termocouple	DIN43710	-200, 600	-328, 1112	
Rt	Pt100 Rezistans Termometer	IEC751	-200, 840	-328, 1544	

Par.05--- 5 1.6L HE

When the universal sensor input connection is broken. Set gigh or low value.

Setting Preferences: Lo -HZ

Par.06 EL	Temperature unit.			
0[Setting Preferences : "L - "F			
Par.07	If there is an input error this value is added.			
23.83	Setting Preferencesi: - IDD - IDD	Biri	mi	°C
Par.08FE[Filtter time adjustment.			
1.0	Setting Preferences: 0.1 - I0.0	Birimi	Sai	niye
Par.09 r {F	"R1" Relay running function type selection.			
roE	Setting Preferences: Table 2-3			

Table-2

0	OFF	No relay function.
1	ROC	On / Off heating ouput.
2	DOC	On / Off cooling output.
3	AHA	Absolute Upper Deviation Alarm
4	ALA	Absolute Lower Deviation Alarm
5	HDA	Relative Upper Deviation Alarm
6	LDA	Relative Lower Deviation Alarm
7	OBA	Outside Band Alarm
8	IBA	Inside Band Alarm
9	PPC	Positive directed PID control
10	NPC	Negative directed PID control
11	OPN	Open valve
12	CLS	Close valve
13	APR	Inside of approach band
14	ODV	Outside of approach band
15	RUN	active If time is running
16	LTU	active when before time is finished
17	EOP	active when time is finished

Table-3

Alarm Type	Abb.	Graphical Representation
ON/OFF Heating	ROC	0 CSP PV
ON/OFF Cooling	DOC	0 CSP PV
Absolute High Deviation Alarm	AHA	1 0 ASP PV
Absolute Low Deviation Alarm	AIA	1 0 0 ASP PV
Relative High Deviation Alarm	HDA	1 0 CSP+ASP PV
Relative Low Deviation Alarm	LDA	0 CSP+ASP PV
Outside Band Alarm	ОВА	0 CSP-ASP CSP+ASP PV
Inside Band Alarm	IBA	1 0 CSP-ASP CSP+ASP PV

CSP value in the table is the Control Set Point. **ASP** value is the set value of Control-Output itself that is selected as being alarm (DO1.S, DO2.S).

"1" in the table means Alarm exists and "0" means Alarm does not exists. Hatched fields are the **Hysterisis** fields and their width is HYS.

Par.10--- - (L

R1" Relay lock output. If it is used as alarm select <code>Enb</code> and relay is active upto STOP key is pressed.

Setting Preferences: dbb - Enb

Par.11--- - 2.F

"R2" Relay running function type selection.

Setting Preferences: Table 2-3

Par.12--- ィミレ d5も "R2" Relay lock output. If it is used as alarm select <code>Enb</code> and relay is active upto STOP key is pressed.

Setting Preferences: dbb - Enb

Setting Preferences: Tablo 4

Par.17--- o (F

"O1" Analog output module function selection.

Table-4

0	off	No function
1	PTR	Send process value
2	STR	Send set value
3	PPC	"+" directed control output
4	NPC	"-" directed control output

°C. **Birimi**

Birimi °C

Par. 18--

O1" Analog output type selection.

Setting Preferences: Table 5

Table-5

0	0-20	0-20mA
1	20-0	20-0mA
2	4-20	4-20mA
3	20-4	20-4mA
4	0-10	0-10V
5	10-0	10-0V
6	2-10	2-10V
7	10-2	10-2V

It determines the lower value of output scale when "O1" analog ouput module Par.19--is used as a transmitter

Setting Preferences : 1999 - 9999 It determines the upper value of output scale when "O1" analog ouput Par.20---

module is used as a transmitter. Setting Preferences: 1999 - 9999 °C Ririmi

Par.21---- 5 21 1 It determines the lower limit value of all set values.

> Setting Preferences: 1999 - 5PHL Birimi °C

Par.22---- 5 PH It determines the upper limit value of all set values.

Setting Preferences: 5PLL - 9999

Par.23--Output is reversed when reverse is selected.

Setting Preferences: rEU (Reverse) - dEr (Normal)

Par.24---Continious Control: Heating is controlled continiously as time independent.

Setting Preferences: on - oFF


		•	•
Par.25	Time Unit Selection		
ñΕn	Setting Preferences : 5EE(secand) - 5En(minute) - Halln(hou	ur)	
Par.26 PoR	Energizing Action		
Ent	Setting Preferences: LnE(continue while running) - brP(break	run)	
Par.27	Time period to enter from closed position to open position for nor proportional valve (This periode should be measured)	n feed ba	ack
188	Setting Preferences: 10 - 2500 Birin	ni Sar	niye
Par.28	Only for pozitif PID control actifve than one way (+) control out value is set.	put lowe	er
ii.ii	Setting Preferences: 0.0 - Soor	Birimi	i
Par.2950HL	Only for pozitif PID control actifve than one way (+) control out value is set.	put upp	er
انانانا	Setting Preferences : בּסהר - וממט	Birimi	%
Par.3050ñr	Only for pozitif PID control actifve than one way (+) control output value is set.		
<u> </u>	Setting Preferences: Sall-SaHL	Birimi	%
Par.31	Only for pozitif PID control actifve and set value is "0" control or value is set.	ıtput upı	oer
oFF	Setting Preferences: oFF(Kapalı), 0.1 - 100.0	Birimi	%
Par.32 doll	Only for Negatif PID control actifve than two way (+/-) control clower value is set.	output	
-	Setting Preferences: IDDD - door	Birimi	%
Par.33 doHL	Only for Negatif PID control actifve than two way (+/-) control oupper value is set.	output	
100.6	Setting Preferences: door - 100.0	Birimi	%
Par.34 donr	Only for Negatif PID control actifve than two way (+/-) control of value is set.	output N	/I.R
<u> </u>	Setting Preferences: doLL - doHL	Birimi	%

			•	
Par.35 RESP	Auto-Tune Set Pointi: If user wants the Auto-Tune operation certain set value, it determines this set value.		ke fo	r a °C
	Setting Preferences: 1 - 9999	BII	rimi	
	NOT: AutoTune can be done if PID control should be se	lected.		
Par.36 Pb - P	P = Pozitive Proportional Band			
I II. 1	Setting Preferences: 1 - 9999	Bi	rimi	°C
	NOT: If PID control is active.			
Par.37 Pb- n	N = Negative Proportional Band			
ii. i	Setting Preferences: 1 - 9999	Bi	rimi	°C
	NOT: If PID control is active.			
Par.38	I = İIntegral time constant.			
orr	Setting Preferences: 1 - 9999	Birimi	Sar	niye
	NOT: If PID control is active.			
Par.39 db	D = Differrantial time constant.			
off	Setting Preferences: 1 - 9999	Birimi	Sar	niye
	NOT: If PID control is active.			
Par.40 [P	Control Period : It determines the period of a control cycle Output Module.	for Analo	g	
<i>C</i>	Setting Preferences: 1 - 250	Birimi	Sar	niye
	NOT: If PID control is active.			
Par.41 udb	It determines the dead band of proportional valve. If this value valve movement becomes stable but sensitivity decreases.		asec	l,
1.0	Setting Preferences : 0.1 - 25.0	Birim :	%	1
	I			

Par.42	It determines the serial communication address. All addresses should be unique that are connected to a serial communication line.
off	Setting Preferences : aFF(Kapalı) , 1 - 127
Par.43 bAUd	It determines the serial connection speed.
9.6	Setting Preferences: 4.B - 9.5 - 19.2 - 38.4
Par.44 Pr	It determines the parity type in serial communication.
Eun	Setting Preferences : nanE(None) - add(Odd) - Eun(Even)
Par.455 [.[]	It determines the security code for Operator page.
Li Li	Setting Preferences: 1999 - 9999
Par.465 <i>E.2</i>	It determines the security code for Configuration page.

Setting Preferences: 1999 - 9999

To pass Operator Page

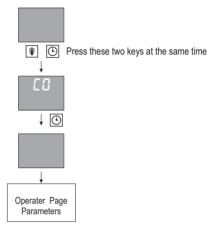

In order to access the operator page parameters, press and hold both keys for 3-4 second.

Par.47	Oparator Password SCO value sholud be entered to pass ope	erator p	age.
	Setting Preferences: 1999 - 9999		
Par.48 5P	It determines the progress value per minute if user wants control progressed as a ramp. When this paremeter is set $RPPr$ parameter αFF .		
	Setting Preferences: oFF (Kapalı) 0 - 100 Birir	ni Da	kika
Par.49 EP	If Proses value reached to set value, Than Time is started up to finished. This parameter should be αc . When this parapeter is a parameteter should be αFF .		٦٠
	Setting Preferences: an -aFF		
Par.50	Approach Value: When set value and prosess value difference than this value time is not start and time display is blinking.	e is gre	ater
	Setting Preferences: oFF = 1 - 9999	Birimi	°C
Par.51 5EE {	R1 Relay set value		
3	Setting Preferences: SPLL-SPHL	Birimi	°C
:			
:			_
Par.545EE2	R4 Relay set value		
8	Setting Preferences: 5PLL-5PHL	Birimi	°C
Par.55 H45	Hhysteresis: These values are used for ON/OFF control and Au operations. (For Auto_Tune operation, choose the smallest val bigger than the system uncertainty.)		
	Setting Preferences 1 - 9999	Birimi	°C
:			
Par.59 HY52	R4 Relay hysterysis value		
Cü	Setting Preferences: 1 - 9999	Birimi	°C

Auto-Tune:

After setting the HYS and ATSP parameters to the required value, while this parameter is displayed, Auto-Tune operation is started by pressing the and keys. While operation continues, AT message blinks on time display. When the operation finished, **P,I,D**, ve CP parameters are set to new values.

In order to cancel the Auto-Tune operation, while AT message is displayed, (STOP) key must be pressed.

OC770 series devices can operate with many kinds of sensor types and each output of the device can be used as a seperate alarm or control. Therefore, before using this device, input/output types and basic functions should be set properly.

Model OC990 has 1 Item Analog-Input as standard. In addition, 2 Item Digital-Output and 1 Item Analog-Output may be added to system optionally. Analog-Input types, Analog-Output Types and functions, Digital-Output functions are determined with parameters seperately. These parameters can be found in Configuration-Page.

Analog-Input is used to measure the temperature value. Sensor type that will be connected to this input is determined by "AI.T" parameter (Table-1).

Unit of Temperature-Value is determined as being $^{\circ}$ C or $^{\circ}$ F with "EU" parameter and parameters that related to Temperature-Value uses this unit.

Decimal point of Temperature-Value or other parameters that has a unit of EU is determined by "DP" parameter. Each time that "DP" changes, these parameters should be reset.

Which value will the process value have is determined by "SBA" parameter when temperature sensor is broken or sensor cables break off.

Each Digital-Output of device can be used as being alarm or some control purposes. Each Digital-Output has its parameter that determines its own function. Preferences of these parameters are explained in detail in Table-8. Explanations of ON/OFF Control and Alarm-Types can be found in the next page. Alarm-Set-Values of Digital-Outputs that are selected as being alarm are determined with "DO1.S, DO2.S" parameters.

If any Digital-Output is selected as being Alarm, **Alarm-Lock** parameter (DO1.L, DO2.L) of this Digital-Output determines if the Alarm will be locked or not when an Alarm condition happens or lost. When an output enters in **alarm** state and its alarm lock is selected as being "ENB", it can only be **reset by the user**.

If **Servo-Motorized-Valve-Control** will be done, one of the Digital-Outputs' or Relays' function should be selected as being "OPN" and the other should be "CLS". To open or close the valve, these outputs should be used.

Adres	s Abr.	Explanation	Unit	Mult.	Setting	Min.	Max.
0		Decimal Point (DP)					
1		Process Value	EU	10^DP			
2		Remaining Time	TU				
3		Instantaneous Set Value	EU	10^DP			
4		PID Control Output Value	%	10			
5		Temperature Set Value	EU	10^DP	Yes	-1999	9999
6		Time Set Value	TU		Yes	0	9999
20	Set.1	First Digital Output (DO1) Set Point	EU	10^DP	Yes	-1999	9999
21	Set.2	Second Digital Output (DO2) Set Point	EU	10^DP	Yes	-1999	9999
22	Set.3	Third Digital Output (DO3) Set Point	EU	10^DP	Yes	-1999	9999
23	Set.4	Fourth Digital Output (DO4) Set Point	EU	10^DP	Yes	-1999	9999
24	APPR	Approach Value	EU	10^DP	Yes	0	9999
25	HYS	Hysterisis	EU	10^DP	Yes	1	9999
26	ATSP	Auto-Tune Set Point	EU	10^DP	Yes	-1999	9999
27	PB-P	Proportional Band for "+" Output	EU	10^DP	Yes	1	9999
28	PB-N	Proportional Band for "-" Output	EU	10^DP	Yes	1	9999
29	ΙΤ	Integral Time (0 = Off)	S		Yes	0	9999
30	DT	Derivative Time (0 = Off)	S		Yes	0	9999
31	CP	Control Period	S		Yes	-1999	9 290
32	DB	Dead Band of Control Output	%	10	Yes	-199 9	9 299
40	O1LL	Transmitter Scale Low Value	EU	10^DP	Yes	-1000	1000
41	O1HL	Transmitter Scale High Value	EU	10^DP	Yes	1	100
42	TSV	Temperature Error Correction Value	EU	10^DP	Yes	10	2500
43	FTC	Filter Time Contant	S	10	Yes	0	1000
44	VTT	Full Scale Movement Duration of Valve	S		Yes	0	1000
45	SOLL	Low Limit of Single Sided (+) Control Output	%	10	Yes	0	1000
46	SOHL	High Limit of Single Sided (+) Output	%	10	Yes	-1000	1000
47	SOMR	Manual-Reset Directed (+) Control Output	%	10	Yes	-1000	1000
48	DOLL	Low Limit of Double Sided (+/-) Output	%	10	Yes	-1000	1000
49	DOHL	High Limit of Double Sided (+/-) Output	%	10	Yes	-1999	9999
50	DOMR	Manual-Reset Double Sided (+/-) Output	%	10	Yes	-1999	9999

Adres	Kıs.	Açıklama	Birim	Çarpan	Ayar	Min.	Max.
51	SPLL	Low Limit of Set Point EU 10^DP Yes		Yes	-1999	9999	
52	SPHL	High Limit of Set Point	EU	10^DP	Yes	-1999	9999
60	S1T	Universal Analog Input (AI1) Type			Yes	0	10
61	Eu	Temperature Unit (EU)			Yes	0	1
62	DP	Measurement Decimal Point (DP) (1)		Yes	0	1	
63	s1bL	Sensor Connection is Broken Action			Yes	0	1
64	R1.f	R1 Function	Tables 2-3		Yes	0	17
65	R1.I	R1 Lock			Yes	0	1
66	R2.f	R2 Function	Tables 2-3		Yes	0	17
67	R2.I	R2 Lock			Yes	0	1
68	R3.f	R3 Function	Tables 2-3		Yes	0	17
69	R3.I	R3 Lock			Yes	0	1
70	R4.f	R4 Function	Tables 2-3		Yes	0	17
71	R4.I	R4 Lock			Yes	0	1
72		Position Feedback			Yes	0	1
73	O1.f	First Analog Output (AO1) Function	Table-4		Yes	0	4
74	O1.t	First Analog Output (AO1) Type	Table-5		Yes	0	7
75	O2.f	Second Analog Output (AO2) Function	Table-4		Yes	0	4
76	O2.t	Second Analog Output (AO2) Type	Table-5		Yes	0	7
77	CF	Control Form			Yes	0	1
78	CCNT	Continious Control			Yes	0	1
79	TU	Time Unit			Yes	0	2

Bit Type Parameters Contact Addresses				
Address	Setting Perm.	Explanation (1 / 0)		
0	No	First Digital Output(DO1) (ON / OFF)		
1	No	Second Digital Output(DO2) (ON / OFF)		
2	No	Third Digital Output(DO3) (ON / OFF)		
3	No	Fourth Digital Output(DO4) (ON / OFF)		
4	No	Lower Than Scale Error (Yes/No)		
5	No	Higher Than Scale Error(Yes / No)		
6	No	Broken Sensor Error (Yes / No)		
7	No	Process Measurement Error (Yes/ No)		
8	Yes	Auto-Tune (Start/ Stop)		
9	Yes	Operation (Start/Stop)		

Error Message	Meaning		
-SB-	Sensor connection is broken.		
-Uf-	Process value is below the sensor scale.		
-Of-	Process value is above the sensor scale.		
nn	Process value is too high that it cannot be displayed.		
-vv-	Process value is too low that it cannot be displayed.		

www.ordel.com.tr

Üretici ve Teknik Servis : ORDEL Ltd. Şti. Uzayçağı Cad. 1252. Sok. No:12 OSTİM / ANKARA Tel:+90 312 385 70 96 (PBX) Fax: +90 312 385 70 78

