# **UST100**

## **Analog Signal Converter USERS' GUIDE**



## **DESCRIPTION of the DEVICE**


UST100 Model devices are used to convert analog signals that are created in any environment to standart analog signals isolated from input.

These devices are microcontroller based and can be configured easily by using SBA100 USB/UART Converter. All inputs and outputs are isolated.


### SAFETY PRECAUTIONS

- Before using the device, please read the warnings below and this guide carefully. The accidents or damages resulting from not following the warnings included in this guide are under user's responsibility.
- This device is intended to be used by qualified personnel in industrial environments, do not use in houselike environments.
- Do not use the device at places where corrosive, flammable and explosive gases exist. Contact points may create electrical discharge and this may cause explosion or fire.
- Do not allow metal fragments or lead wire scraps or liquid matters to fall inside this device. Otherwise fire or electrical shock may happen.
- Take the neceessary precautions in order to prevent accidents and damages that may result in case the device gets faulty.
- There is no fuse or switch that brings the device in power down state, these should be added to the system by the user.
- Sensor and signalling cables should not be routed close to the power cables or inductive load cables.
- Before connecting the device, supply voltage must be checked if it is suitable according to the product code.
- Do not power up the device before the connections related with the device are performed in accordance with the connection diagram. While the device is powered, do not touch on the terminals.
- Configuration settings at factory out should be changed according to the user's preferences. The accidents and damages resulting from incorrect configuration settings are under users' responsibility.
- Lifetime of the device is 10 years.
- Never disassemble, repair and modify the device. These should be carried out by Manufacturer and Technical Service :


ORDEL Ltd. Şti. Uzayçağı Cad. 1252. Sok. No:12 OSTİM / ANKARA

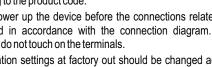

#### **CONNECTION DIAGRAM**

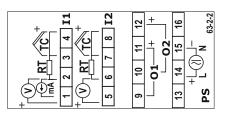

#### **PRODUCT CODE**

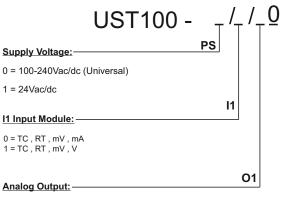

- 1 = 0/4-20mA Current Output
- 2 = 0/2-10V Voltage Output

#### **TECHNICAL SPECIFICATIONS**

100-240Vac/dc: +%10 -%15	24Vac/dc: +%10 -%20
3W,5VA	
Thermocouple ( B,E,J,K,L,N,R,S,T,U ), Resistance Thermometer ( Pt100 ),2 WireTransmitter, Current( 0/4- 20mA ), Voltage ( 0-50mV, 0/2-10V )	
24Vdc ( Isc = 30mA )	
Thermocouple: 10M $\Omega$ , Current: 10 $\Omega$ , Voltage: 1M $\Omega$	
Current: 0/4-20mA, 20-4/0mA ( $RL \leq 500\Omega$ )	
Voltage: 0/2-10V, 10-2/0V ( $\text{RL} \geq 1 \text{M} \Omega$ )	
100 years, 100.000 renewals	
+/- %0,2	
100ms	
Operation: -10+55C, Storage: -20+65C	
IP20	
Width: 25 mm, Height: 91 mm, Depth: 113 mm	
134 gr	
	3W,5VA Thermocouple ( B,E,J,K,L,N,F Thermometer ( Pt100 ),2 WireT 20mA ), Voltage ( 0-50mV, 0/2 24Vdc ( lsc = 30mA ) Thermocouple: 10MΩ, Current Current: 0/4-20mA, 20-4/0mA Voltage: 0/2-10V, 10-2/0V ( Rt 100 years, 100.000 renewals +/- %0,2 100ms Operation: -10+55C, Storage IP20 Width: 25 mm, Height: 91 mm

Document Number: KK-UST100-